



Installation Instructions Bali Gulf and Tulip Gas Torches

Note: All installations should conform to local plumbing codes. The following instructions are general in nature.

1. Before placing the torch on the post, connect a 6 to 8 foot long piece of 1/4" O.D. copper tubing (sold separately) to the flare fitting on the valve. In order for the torch to have an adequate supply of gas, it is recommended that no more than 8 feet of copper tubing is used.
2. Be sure to test for leaks before installing the torch onto the post. (NEVER use an open flame to check for leaks. A soapy solution applied with a brush is best.)
3. Line up the gas valve access hole in the torch hub with the slotted hole in the post. The valve can be used for on/off operation or for flame adjustment.
4. The pipe size for the remainder of the supply line should be determined by the distance in which the line will be run.

Please Note: This appliance should be installed no less than 10 feet horizontally or vertically to any combustible material. The torch must also be installed a minimum of 76" from ground level to top of the torch.

Gulf Torch Only: After the torch has been installed on the post, and the connection to the gas supply has been made, pour the small granular lava rock into the torch bowl, making sure to cover the diffuser.

www.buytikitorches.com
866 898-5304